


DuroZone®

INSTALLATION INSTRUCTIONS: Concealed Ceiling Box for Cable Operated Dampers

CAUTION: Prior to any drilling, be sure to turn off all incoming power. Use proper safety equipment: goggles, gloves and ear protection.

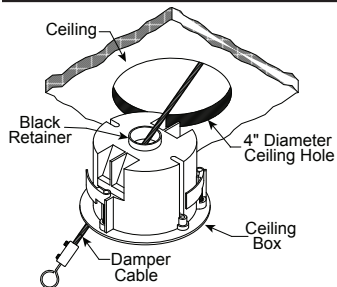


Step 1:

Cut a 4" diameter hole in the ceiling at the desired location. Snake the damper cable through the ceiling hole and into the black retainer in the rear of the ceiling box.

Caution: DO NOT kink or yank the damper cable during installation.


Note: Ensure the black retainer remains in the ceiling box during installation.

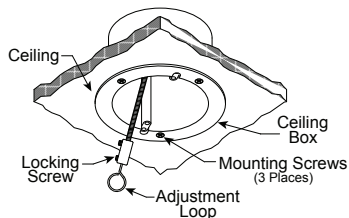

Step 2:


A) Insert the ceiling box into the cut hole and secure it with the mounting screws (3 places). The mounting screws will pull the ceiling box flush to the ceiling. Be sure not to over tighten the screws.

B) Using the adjustment loop of the damper cable, set the damper cable blade as desired and tighten the locking screw.

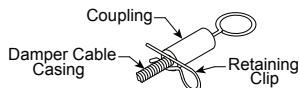

Step 3:

Snap the retaining clip onto the damper cable casing against the coupling to keep the damper cable in the ceiling box after installation.

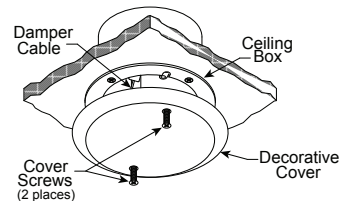

Step 4: Push the protruding portion of the damper cable carefully into the ceiling box and secure the decorative cover in position with the cover screws provided (2 places).

Caution: DO NOT kink the damper cable when pushing it into the ceiling box.