


# DuroZone<sup>®</sup>

## INSTALLATION INSTRUCTIONS: Concealed Wall Box for Cable Operated Dampers

**CAUTION:** Prior to any drilling, be sure to turn off all incoming power. Use proper safety equipment: goggles, gloves and ear protection.

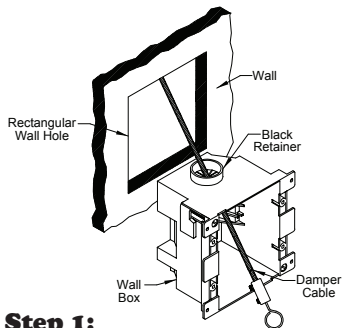


### Step 1:

Cut a 4" x 3-3/4" hole in the wall at the desired location. Snake the damper cable through the wall hole and into the black retainer in the top of the wall box.

**Caution:** DO NOT kink or yank the damper cable during installation.


**Note:** Ensure the black retainer remains in the wall box during installation.

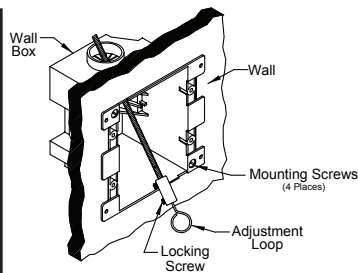

### Step 2:


**A)** Insert the wall box into the cut hole and secure it with the mounting screws (4 places). The mounting screws will pull the wall box flush to the wall. Be sure not to over tighten the screws.

**B)** Using the adjustment loop of the damper cable, set the damper blade as desired and tighten the locking screw.

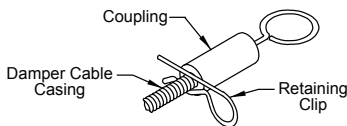

### Step 3:

Snap the retaining clip onto the damper cable casing against the coupling to keep the damper cable in the wall box after installation.

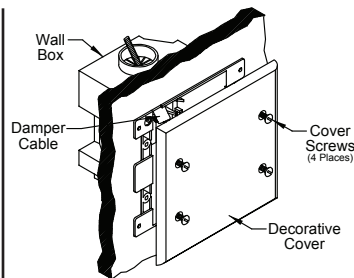

**Step 4:** Push the protruding portion of the damper cable carefully into the wall box and secure the decorative cover in position with the cover screws provided (4 places).

**Caution:** DO NOT kink the damper cable when pushing it into the wall box.